

TURN THE DISPLAY ON


Push the right button under the screen.

PLUG YOUR PC IN

Plug the HDMI cable from the desk in your personal PC.


Select IMPORTA → PC → HDMI on the upper part of the screen.

To enable the touchscreen, plug the USB cable from the desk in your PC.

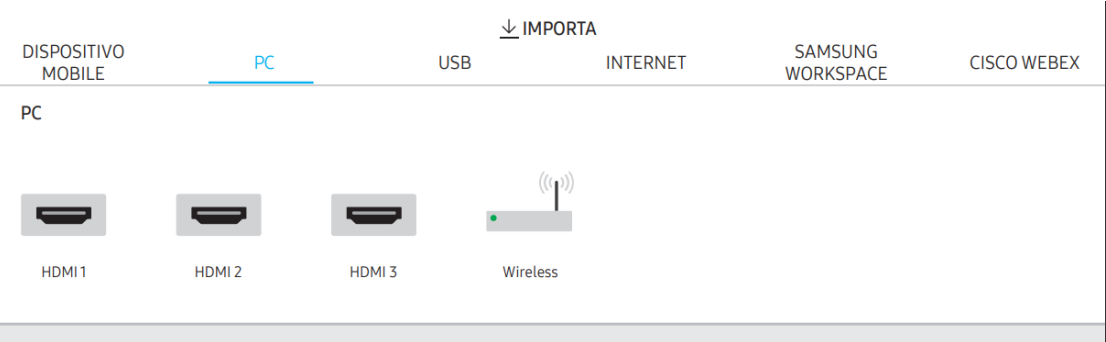

USING THE SCREEN AS AN INTERACTIVE BOARD (WITH PENCIL)

SCREEN MENU

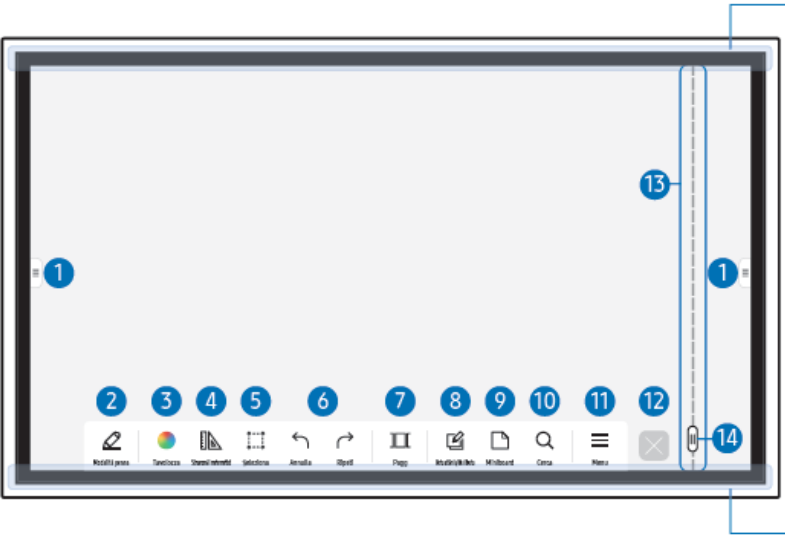

Drawing:

Use the pen to draw freely on the screen.
Thin trait → “tipo penna”
Thick trait → “tipo evidenziatore”

Changing thickness and colour:

Hold the tip of the pen on the screen to select the properties.

Erasing:

Use your finger or your hand to erase.

Selection	Action
1 IMPORTA	Visualizzare lo schermo di un dispositivo mobile o PC collegato al prodotto o importare dati, quali immagini, da un'unità USB o di rete collegata.
2 ESPORTA	Export the screen to selected formats
3	Manage lists and settings
4	Move or change lists per page
5	Add a layer. Layers can be superimposed and saved as a new image
6	Select and modify/copy/email/print hand-written portions of text
7	Undo / repeat the action (up to twenty actions can be undone)
8	Close the current list and add another
9 Linea di interruzione di pagina	Show line/page breaks
10	Scroll pages