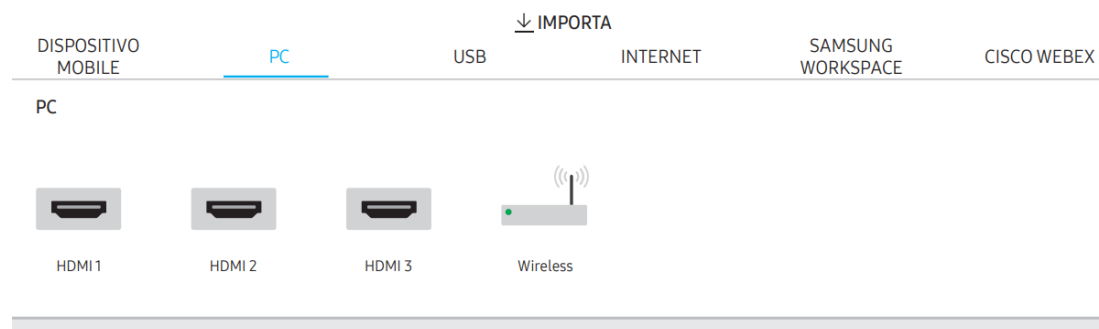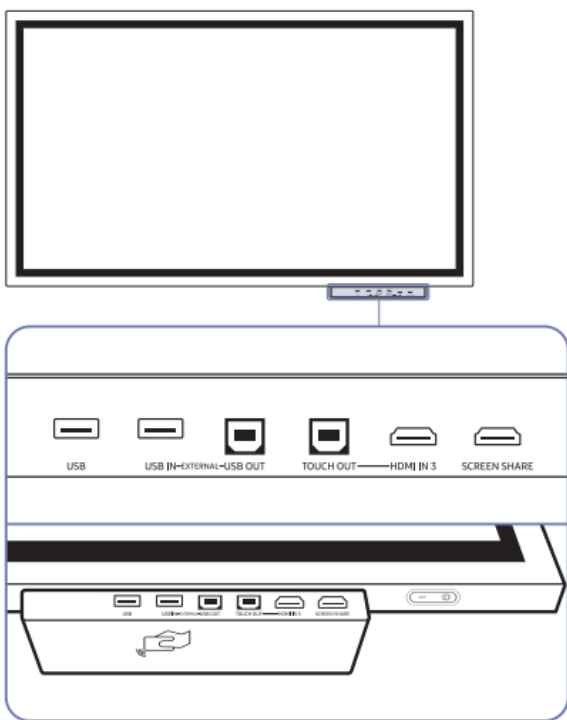## TURN THE DISPLAY ON
Push the right button under the screen.

PLUG YOUR PC IN
Plug the HDMI cable from the desk in your personal PC.
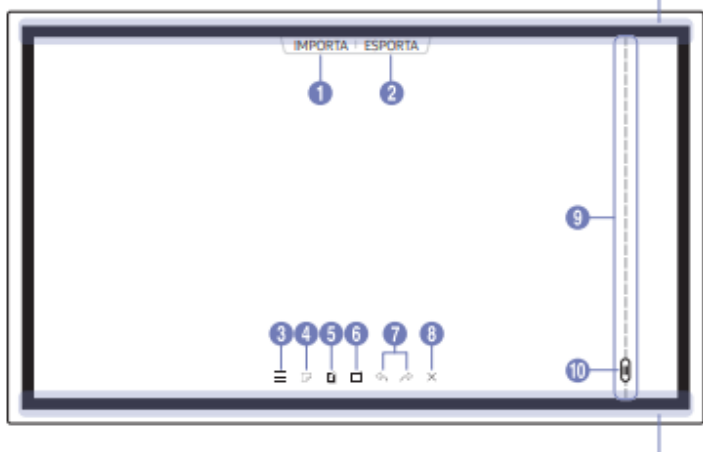Select IMPORTA → PC → HDMI on the upper part of the screen.
To enable the touchscreen, plug the USB cable from the desk in your PC.

↓ IMPORTA

| DISPOSITIVO MOBILE | PC | USB | INTERNET | SAMSUNG WORKSPACE | CISCO WEBEX |

PC

HDMI 1   HDMI 2   HDMI 3   Wireless

USING THE SCREEN AS AN INTERACTIVE BOARD (WITH PENCIL)

SCREEN MENU

Drawing:
Use the pen to draw freely on the screen.
Thin trait → "tipo penna"
Thick trait → "tipo evidenziatore"

Changing thickness and colour:
Hold the tip of the pen on the screen to select the properties.

Erasing:
Use your finger or your hand to erase.

Selection		Action
❶	IMPORTA	Import the screen from a PC or a mobile device, or import data from a USB
❷	ESPORTA	Export the screen to selected formats
❸	☰	Manage lists and settings
❹	🗒	Move or change lists per page
❺	🖺	Add a layer. Layers can be superimposed and saved as a new image
❻	▢	Select and modify/copy/send/print hand-written portions of text
❼	↩/↪	Undo / repeat the action (up to twenty actions can be undone)
❽	✕	Close the current list and add another
❾	Linea di interruzione di pagina	Show line/page breaks
❿	▯	Scroll pages